 


# Archway Add-On

 
## Assembly Instructions




(3) Center Support Poles



(2) TV Mount Support Poles



 (4) Top Support Poles



(2) Support Feet



(2) Connected Poles



(2) Rack Clips



(2) Corner Poles



(2) L-Shaped Top Connected Poles



(2) L-Shaped Bottom Connected Poles



(1) TV Mount Main Support




(2) TV Mount Brackets



(1) TV Stand Graphic


### 1 Connect the Poles

Start by connecting the top, bottom and corner support poles by matching the numbers. Continue with the vertical connected poles. Ensure they are tightened securely.

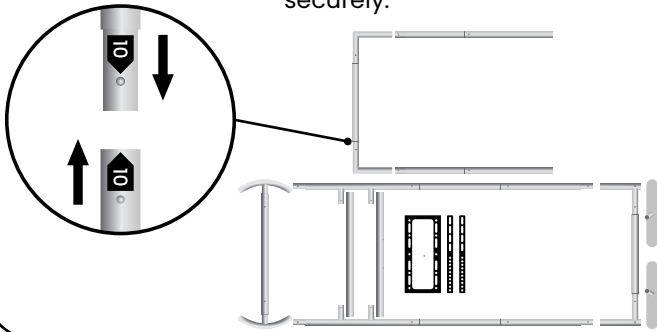


### 2 Assemble the Frame

Connect all of the assembled support poles to form the archway frame.

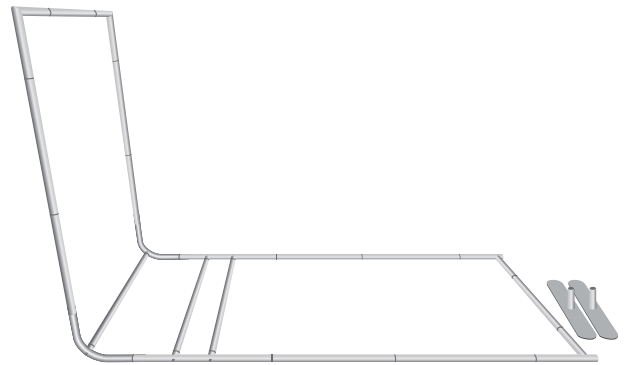


### 3 Assemble the Frame

Connect the two support feet. Ensure they are tightened securely.

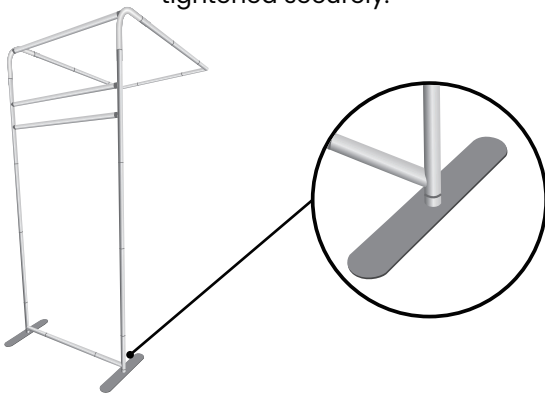

### 4 Install the TV Mounting

Start by removing the bolts on the TV mount supports poles using L-Shaped key.

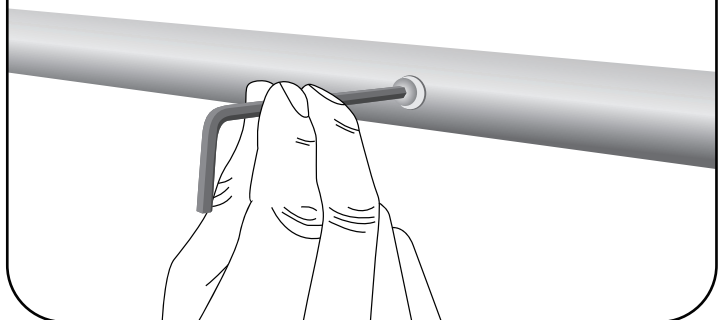


### Storage & Care:

Store in a cool dry location. Clean hardware with a damp cloth. Machine wash the graphics in cold water on a gently cycle. Air dry only. Use a steamer for wrinkles. Never dry-clean.


#### 4 Install The Graphic

Carefully pull the graphic print over the frame. Make sure both sides are pulled down together.

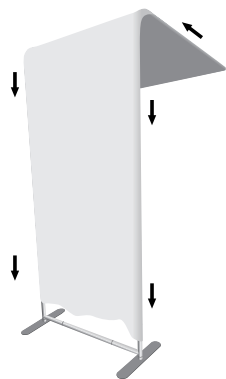


#### 4 Assemble the Frame

Attach the two arch clips to the top-back of the support poles.

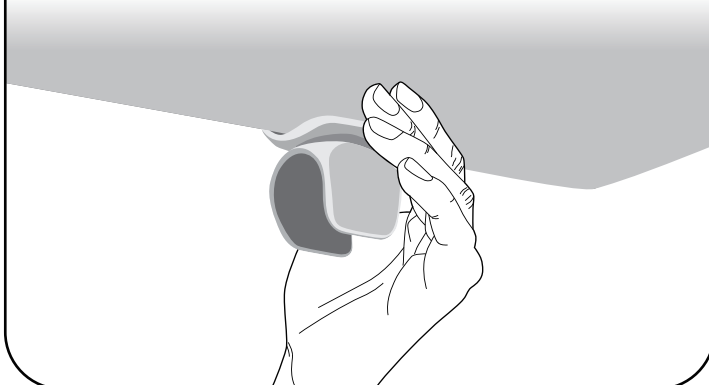


#### 6 Install the TV Mounting

Install the TV mount main support and lock it using the bolts that previously removed. Ensure they are tightened securely.

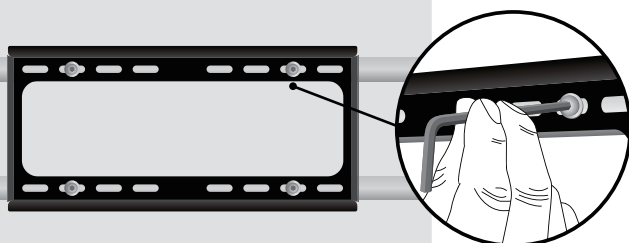


#### 7 Attach The Brackets

Attach the brackets to the TV.

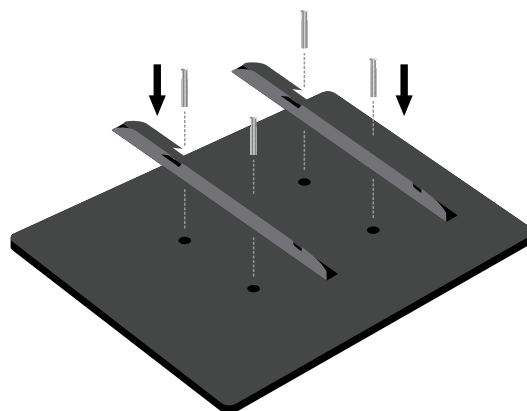

#### 8 Attach The Monitor

Attach the monitor bracket hooks to the top of the TV mount. Tighten the screws into the bottom holes of the brackets in order to safely secure the TV to the mount.

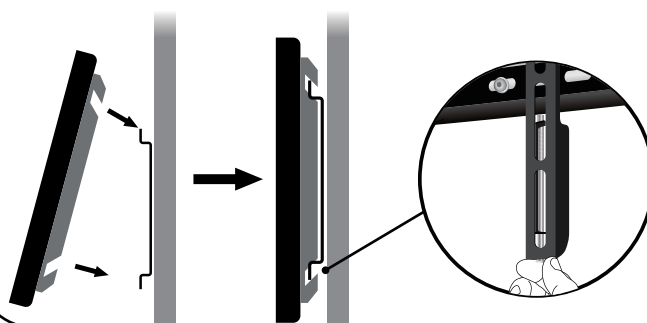

#### Storage & Care:

Store in a cool dry location. Clean hardware with a damp cloth. Machine wash the graphics in cold water on a gently cycle. Air dry only. Use a steamer for wrinkles. Never dry-clean.