 


LookOurWay

 
INFLATABLE BEVERAGE BACKPACK

1

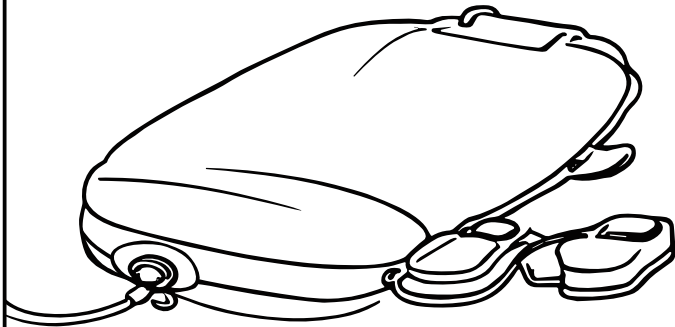


Lay the inflatable backpack flat on the ground.

2

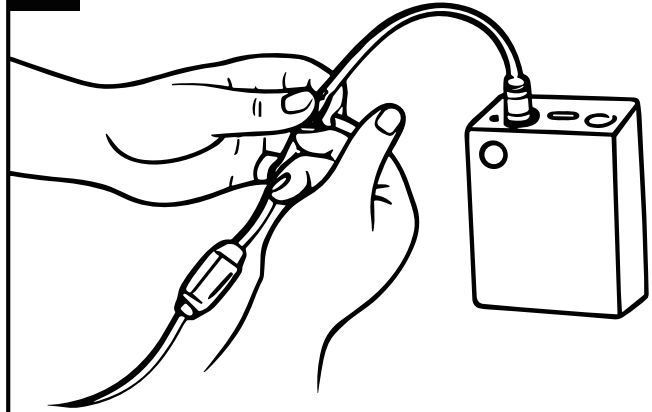

Locate the fan power cable and connect it to the battery.

3

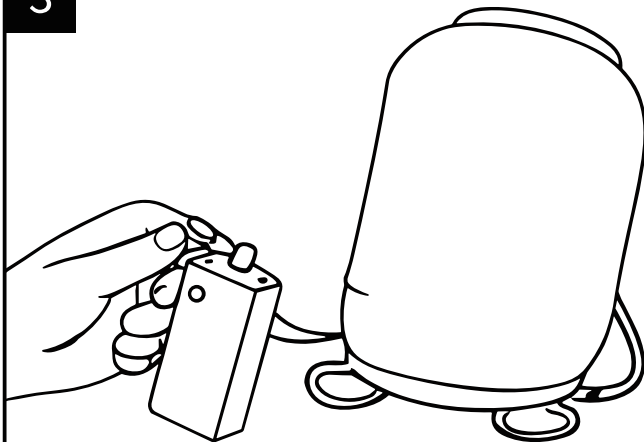

Turn on the battery pack and allow the inflatable to fully inflate.

4



Once inflated, put on the backpack and secure the battery to the harness or attach it to your clothing.

DEFLATION

- Most inflatables can be deflated and properly stored by two people.
- To deflate, unplug the fan unit.
- Open zipper(s) and gently guide the inflatable down on top of itself, taking care not to snag it on the stakes.
- Untie tethers from tie down stakes
- Carefully fold the inflatable into thirds and place in the bag.

WARNING

WARNING: NEVER STORE YOUR INFLATABLE WET FOR OVER 48 HOURS BECAUSE MOLD AND MILDEW WILL FORM CAUSING STAINS AND DISCOLORATION. IF PACKED WET, UNPACK AND LAY OUT FLAT TO DRY FULLY IN THE SUN TO PREVENT DAMAGE. SEE WARRANTY FOR FURTHER INFORMATION.

Remember to gather up all ground stakes and other inflatable accessories to be stored with the inflatable for the next use