

LookOurWay


INFLATABLE TENT EVENT BOOTH (SEALED AIR)

Please read each step before you attempt set-up!

INFLATABLE SET UP: Before you begin to set up your inflatable choose a display area free of all obstructions (powerlines, sharp projections, etc.). The display area should be twice as large as the largest dimension of the inflatable.


NOTE: The 6ft & 10ft (Ball) will use an Air Pump for inflation.

15ft & 20ft will use an Air Blower in Addition to the Air pump.

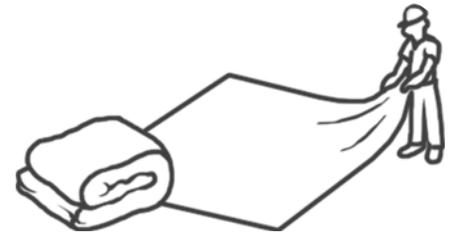

Unpack the inflatable and place in the center of the display area.

2

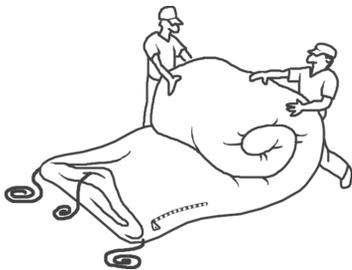


Unroll the inflatable, checking that no folds exist to block the flow of air during inflation.

Untangle all tethers and extend them from the inflatable.

Check the zippers at the base of the inflatable to be sure they are closed

3

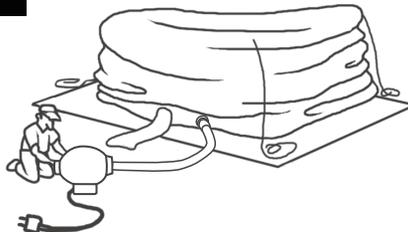


Stack the inflatable on top of itself so that during inflation it will rise vertically.

Connect your Air Blower or Air Pump to the air inlet.

At this point, everything should be ready for smooth and easy inflation.


4

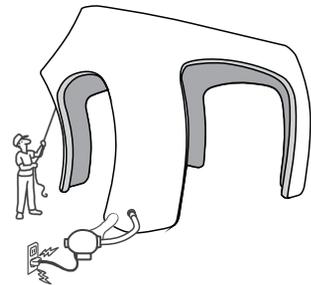

Plug your Air Pump or Air Blower into a 110V outlet. Use caution when making the electrical connection (DO NOT STAND IN WATER)

For 15ft & 20ft balls, please use the Air Blower first to inflate 95% of the way, then top off the air using the Air Pump.

5

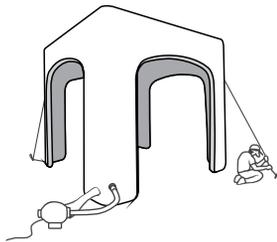

When fully inflated, secure all tethers to tie-down stakes placed around the inflatable so that the tethers project at a 45 degree angle.

Store accessories and bag for future use.
IF YOU HAVE A PROBLEM WITH THE INFLATABLE THAT THE INSTRUCTIONS DON'T COVER, CALL FOR TROUBLESHOOTING ASSISTANCE

(866) 586-3888

DEFLATION

- Most inflatables can be deflated and properly stored by two people.
- To deflate, unplug the fan unit.
- Open zipper(s) and gently guide the inflatable down on top of itself, taking care not to snag it on the stakes.
- Untie tethers from tie down stakes
- Carefully fold the inflatable into thirds and place in the bag.

WARNING

WARNING: NEVER STORE YOUR INFLATABLE WET FOR OVER 48 HOURS BECAUSE MOLD AND MILDEW WILL FORM CAUSING STAINS AND DISCOLORATION. IF PACKED WET, UNPACK AND LAY OUT FLAT TO DRY FULLY IN THE SUN TO PREVENT DAMAGE. SEE WARRANTY FOR FURTHER INFORMATION.

Remember to gather up all ground stakes and other inflatable accessories to be stored with the inflatable for the next use