

 
LookOurWay

INFLATABLE LACROSSE SHOOTING STATION

Please read each step before you attempt set-up!


INFLATABLE SET UP: Before you begin to set up your inflatable choose a display area free of all obstructions (powerlines, sharp projections, etc.). The display area should be twice as large as the largest dimension of the inflatable.

1

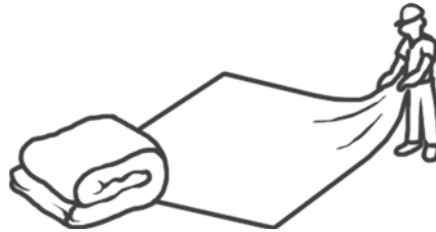


Unpack the inflatable and place in the center of the display area.

 2

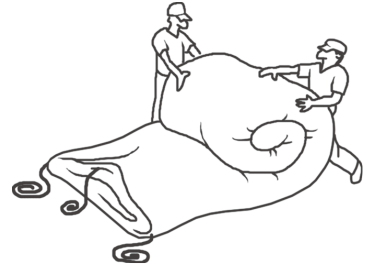

Unroll the inflatable, checking that no folds exist to block the flow of air during inflation.

 
3

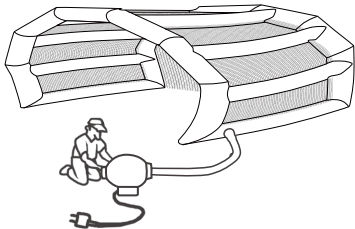

Stack the inflatable on top of itself so that during inflation it will rise vertically.


At this point, everything should be ready for smooth and easy inflation.

 4

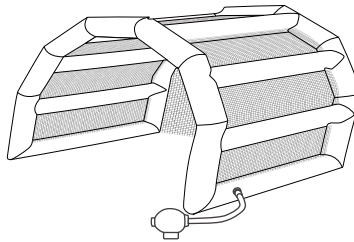

Plug your Air Pump or Air Blower into a 110V outlet. Use caution when making the electrical connection (DO NOT STAND IN WATER)

 5

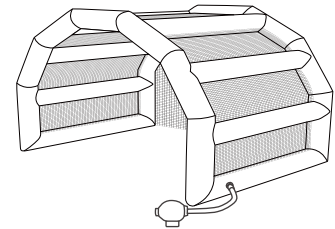

Full inflate until firm. Turn off air pump and close valve. DO NOT OVER INFLATE

Store accessories and bag for future use. IF YOU HAVE A PROBLEM WITH THE INFLATABLE THAT THE INSTRUCTIONS DON'T COVER, CALL FOR TROUBLESHOOTING ASSISTANCE

(866) 586-3888

DEFLATION

- Simply reverse the hose configuration on the air pump and connect back to the air valve.
- Allow pump to remove most of the air.
- Remove the air inflation/deflation cap to allow the rest of the air to escape while folding.
- Carefully stack the inflatable and fold into smaller shape.
- Release the rest of the air while folding up.

WARNING

WARNING: NEVER STORE YOUR INFLATABLE WET FOR OVER 48 HOURS BECAUSE MOLD AND MILDEW WILL FORM CAUSING STAINS AND DISCOLORATION. IF PACKED WET, UNPACK AND LAY OUT FLAT TO DRY FULLY IN THE SUN TO PREVENT DAMAGE. SEE WARRANTY FOR FURTHER INFORMATION.

Remember to gather up all ground stakes and other inflatable accessories to be stored with the inflatable for the next use